

Direct Connect iPod Adapter

Ford F-150 / Lincoln Mark LT
Installation Guide

Connection to factory AM/FM/AUX Radio Or with or
factory Satellite Radio

Equipped with Single CD, CD6 or Audiophile RADIO
or with any of the above plus a SIRIUS SATELLITE RECEIVER

©2007 Brandmotion LLC



Contents

- 1 Congratulations / Contact info
- 2 **Radio Connection**
- 2 Radio Configuration
- 3 Parts List
- 3 Tools Required
- 4 Radio / Adapter Installation Guide
- 10 **Satellite Receiver Connection**
- 10 Satellite Configuration
- 11 Parts List
- 11 Tools Required
- 12 **Satellite / Adapter Installation Guide**

Congratulations / Contact info

You've purchased a Brandmotion iPod Adapter System designed, engineered, and built specifically for your Ford vehicle. We have made every effort to ensure that your Brandmotion iPod Adapter meets the highest quality standards in terms of fit, durability, finish and ease of installation.

At Brandmotion, we are automotive interior "real estate developers". We look over the horizon to understand what automotive consumers want inside their vehicles. With our market knowledge and design expertise, we develop unique, high value, integrated accessories to fill those wants.

Our products are designed to auto industry standards, produced for seamless integration, and engineered for Plug-and-Play installation. We work directly with car companies to develop interior accessories simultaneously with their new vehicles.

If you have specific questions about your Brandmotion product or wish to place another order, please contact.



Brandmotion Operations Center

2328 Alger Drive

Troy, MI 48083

Website: www.brandmotion.com

e-mail us::

customer.support@brandmotion.com

Phone: 877-276-6456

Fax: 480-247-5999

Radio Connection

This section pertains to Ford F-150 / Lincoln Mark LT trucks that do not have a factory-installed satellite receiver.

To install the iPod Adapter you will need to access the back of the OEM radio in your vehicle. Specific instructions for removing the trim in your vehicle are included in this guide.

If you are not confident that you can safely remove your interior trim to perform the installation, contact your dealer or a competent mechanic for assistance.

Radio Configuration



You should be installing your Brandmotion iPod Adapter into a Ford F-150 or Lincoln Mark LT with an OEM radio that is similar to this picture.

Parts List




Adapter Box

iPod Connection
Cable

Radio Short
Harness

Tools Required

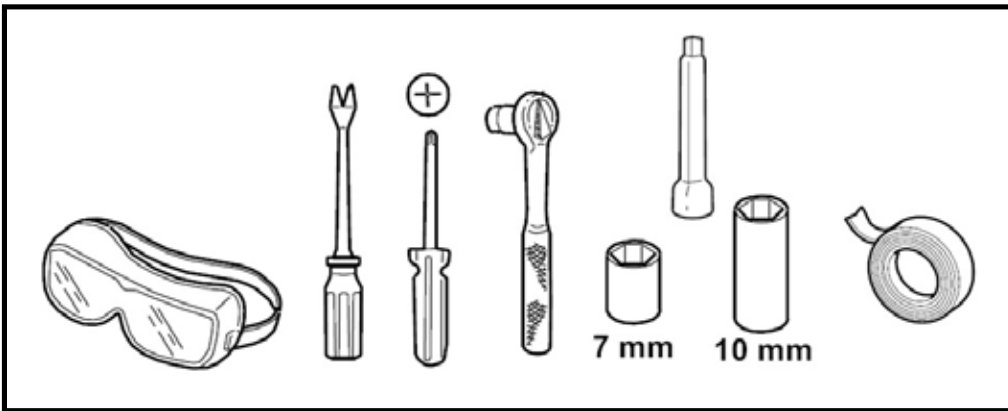



Open the ashtray or cupholder to expose the bottom edge of the HVAC bezel.



Pry up the HVAC bezel starting at the bottom corner.




Work your way up the sides to remove the bezel. Use needle-nose pliers to remove any clips that stay in the dash & replace them on the bezel.



Disconnect the AIR BAG WARNING light at the top of the HVAC bezel & rotate the bezel out of the way. Remove the four 7mm hex-head fasteners. Pull the radio out and disconnect the 24 pin & 16 pin connectors.



Connect the iPod Adapter Vehicle Harness to the radio.

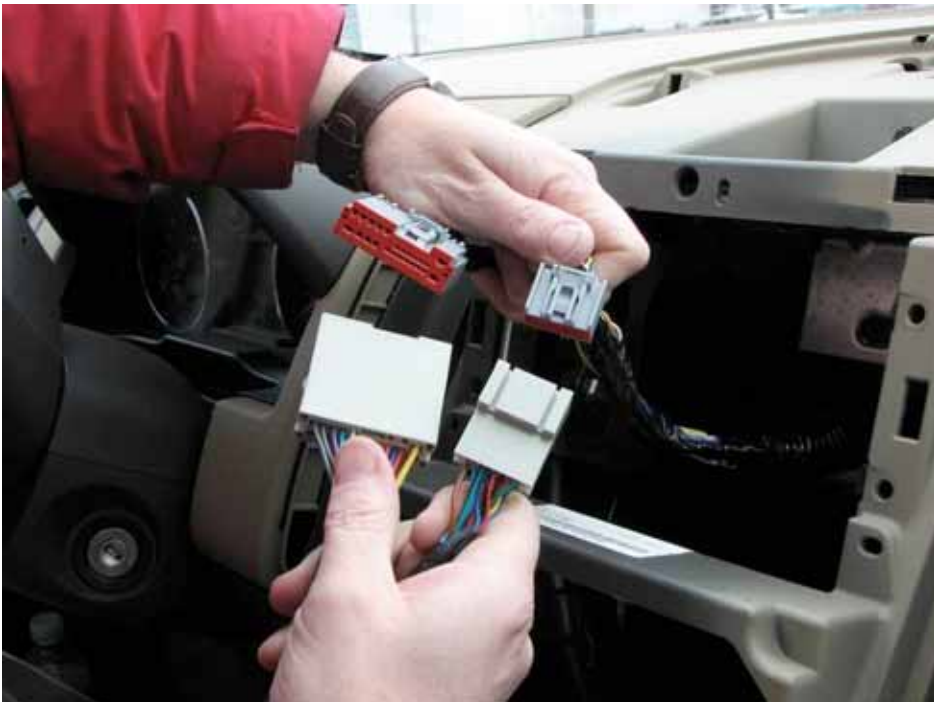

Connect the other end to the vehicle harness



Connect the harness, and the iPod Connection Cable to the Adapter box.



USE VELCRO TO ATTACH

ZIP TIES ARE OPTIONAL

Secure the iPod Adapter box to the vehicle in a location that won't interfere with any other equipment.

Route the iPod Connection Cable through your vehicle to a location near where you want to locate your iPod.

If your location cannot be reached by the 1 meter cable, you may need to mount the Adapter box closer to the iPod location.



Test the system for functionality before you re-install your vehicle trim. See the owner's manual for operating instructions.

AVOID ANY MOVING PARTS or SHARP EDGES – for example; VACUUM MOTORS, BRACKETS etc.

REVERSE TRIM REMOVAL STEPS FOR RE-INSTALLATION

This unit is designed for negative ground 12 V DC operation only. Do not pinch the wires under a screw, or in moving parts (seat railing, etc.)

Before making connections, turn the car ignition off to avoid short circuits.

Be sure to insulate any loose, unconnected leads with electrical tape for safety.

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

Satellite Receiver Connection

This section pertains to F-150 / Mark LT trucks that have a factory-installed satellite receiver.

To install your iPod Adapter you will need to access the satellite receiver in your vehicle. Specific instructions for removing the trim in your vehicle are included in this guide.

Your satellite receiver is located underneath the radio, behind the HVAC bezel. You will need to remove the HVAC bezel to access the satellite receiver.

If you are not confident that you can safely remove your interior trim to perform the installation, contact your dealer or a competent mechanic for assistance.

Satellite Configuration



You should be installing your Brandmotion iPod Adapter into a Ford F-150 or Lincoln Mark LT with a Sirius Satellite Receiver and an OEM radio that is similar to the pictures shown.

Parts List




Adapter Box

iPod
Connection
Cable

Satellite Short
Harness

Tools Required

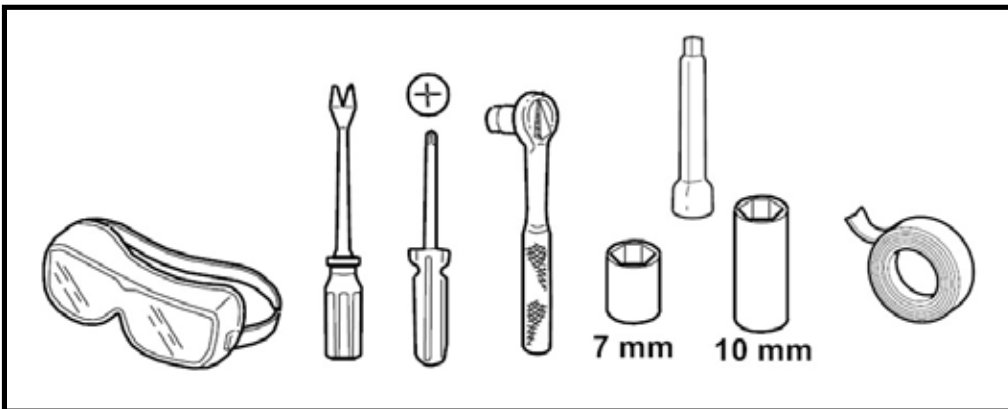



Open the ashtray or cupholder to expose the bottom edge of the HVAC bezel.



Pry up the HVAC bezel starting at the bottom corner.



Work your way up the sides to remove the bezel. Use needle-nose pliers to remove any clips that stay in the dash & replace them on the bezel.

Disconnect the AIR BAG WARNING light at the top of the HVAC bezel & rotate the bezel out of the way. You should now see the Satellite receiver. Remove the black connector.



Connect the iPod Adapter Vehicle Harness to the receiver & to the vehicle harness.



Connect the harness, and the iPod Connection Cable to the Adapter box.



USE VELCRO TO ATTACH

ZIP TIES ARE OPTIONAL

Secure the iPod Adapter box to the vehicle in a location that won't interfere with any other equipment.

Route the iPod Connection Cable through your vehicle to a location near where you want to locate your iPod.

Remember, you'll need to be able to disconnect your iPod to listen to the Satellite Radio.

If your location cannot be reached by the 1 meter cable, you may need to mount the Adapter box closer to the iPod location.



Test the system for functionality before you re-install your vehicle trim. See the owner's manual for operating instructions.

AVOID ANY MOVING PARTS or SHARP EDGES – for example; VACUUM MOTORS, BRACKETS etc.

REVERSE TRIM REMOVAL STEPS FOR RE-INSTALLATION

This unit is designed for negative ground 12 V DC operation only. Do not pinch the wires under a screw, or in moving parts (seat railing, etc.)

Before making connections, turn the car ignition off to avoid short circuits.

Be sure to insulate any loose, unconnected leads with electrical tape for safety.

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.