

## **D-tab Mounting Kit for use with Wedge Mount Mirrors (Kit part number 9002-6112)**


**Please read thoroughly before starting installation  
and check against photo that kit contents are complete.**

### **Items Included in the Kit:**

Ampule containing Activator – Part A  
Tube containing Adhesive – Part B  
Zip lock bag containing:  
D-tab for Wedge Mount Mirror  
These Instructions

### **Tools & Supplies Needed:**

Rubbing Alcohol  
Crayon/Marking Pen  
Safety Razor Blade  
Measuring Tape (optional)

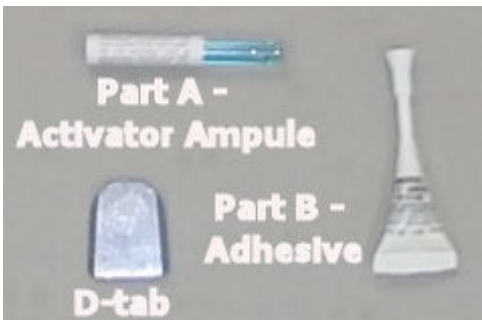

### **IMPORTANT: Must use Part A before Part B!**

This adhesive is NOT recommended for plastic D-tabs.

### **Installation Safety Precautions:**

- Work in a well ventilated area that is clear of obstructions.
- Secure vehicle with tire chucks in both front and rear of tires.
- Wear safety goggles and snug fitting clothes.
- Use tools only for their intended purpose and which are in good repair.
- Only perform task if confidence, skill, and physical ability permit.

**Step 1:** If installing the D-tab to a vehicle that came without a wedge mount mirror or a new windshield lacking a D-tab, use a measuring tape to determine the desired location of the mirror and mark OUTSIDE of the windshield with a crayon or marking pen.

**Step 2:** Thoroughly scrape inside windshield glass with a safety razor blade to remove any old adhesive. Wipe clean with rubbing alcohol.


**Step 3:** Remove paper sleeve from Part A – Activator Ampule to expose the felt tip. Squeeze the end containing the fluid until vial inside breaks, releasing Activator into the felt tip. Remove paper sleeve.

**Step 4:** Use Part A – Activator to coat the small side of the D-tab (see photo at right) and the inside of the windshield where the D-tab is to be mounted. Allow Activator to dry for 5 minutes. DO NOT TOUCH D-tab or glass.

**Step 5:** Cut or break the cap off Part B – Adhesive. Coat the small side of the D-tab with Adhesive.

**Step 6:** Taking care to make sure the D-tab is right side up, immediately apply D-tab to the windshield and hold firmly for 1 minute. IMPORTANT: Allow to set for 15 minutes.

**Step 7:** Slide mirror onto D-tab. If installing a Brandmotion mirror, use a T-20 Torx driver to torque the mirror screw to 1.8 Nm (16 lb-in) and do not exceed 2.2 Nm (19.5 lb-in). Follow manufacturer's specs for attaching and torquing a non-Brandmotion mirror.

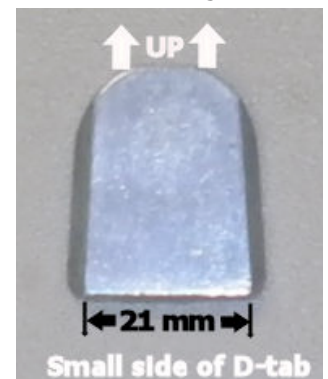

**NOTE: We strive to provide accurate and up-to-date installation instructions. For the latest full color instructions, as well as an installation video, please visit [www.brandmotion.com](http://www.brandmotion.com)**

### **DANGER:**

**ACTIVATOR:** Do not use or keep in the presence of open flame or spark. Prolonged or repeated exposure may affect the nervous system. FIRST AID

**TREATMENT:** If swallowed, call physician or poison control center immediately. For skin contact, wash thoroughly with soap and water. Contains Hexane. KEEP OUT OF THE REACH OF CHILDREN.

**ADHESIVE:** Contains acrylic acid and methacrylate ester. Avoid eye and skin contact. FIRST AID TREATMENT: In case of eye contact, flush with water for 15 minutes; call a physician. For skin contact, wash thoroughly with soap and water. KEEP OUT OF THE REACH OF CHILDREN.

**WARNING:** This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.