

**Universal Center Armrest Qi Wireless Charging Kit  
(Kit #FDMC-1213)**

**Items included in the Kit:**

Qi Wireless Charging Armrest Tray  
Power Harness with 3 amp Fuse  
Trimmed Substrate  
Trimmed Non-Slip Mat  
Metal Mounting Plate  
4 – Flat Head 1" Philips Head Screws  
4 – Flat Head Torx 1/4" Screws  
2 – Adhesive Pads  
Instructions and Template  
Removable Consumer Product Label



**\*Note this product is designed to work with Qi compatible devices. Please confirm that your device is Qi compatible before installation. Visit [www.brandmotion.com/appguide](http://www.brandmotion.com/appguide) for phone compatibility guide.**


**Safety Precautions:**

- Work in well ventilated area that is clear of obstructions.
- Secure vehicle with tire chucks in both front and rear of tires.
- Turn vehicle accessories OFF and ensure ignition key is in OFF position.
- Wear safety goggles and snug fitting clothes.
- Use tools only for their intended purpose and which are in good repair.
- Only perform this task if confidence, skill, and physical ability permit.


**NOTE: We strive to provide accurate and up-to-date installation instructions. For the latest full color instructions, as well as an installation video, please visit [www.brandmotion.com](http://www.brandmotion.com)**

## INSTALLATION INSTRUCTIONS


### Product Orientation:

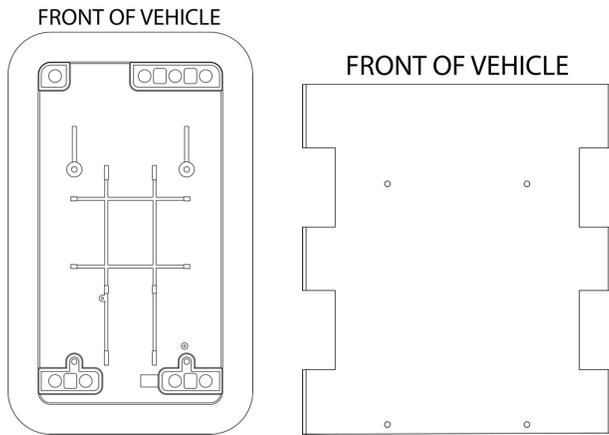

**Step 1:** Remove armrest from vehicle. It is recommended to take apart the armrest prior to cutting to look for hidden mounting tabs and latch mechanisms.

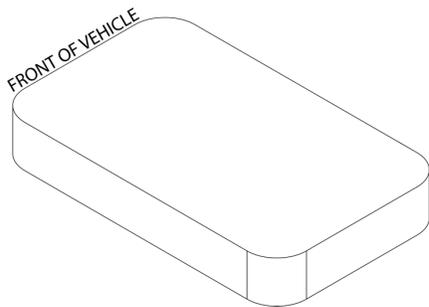


**Step 2:** Place template in desired location making sure to check clearance under armrest for possible obstructions.

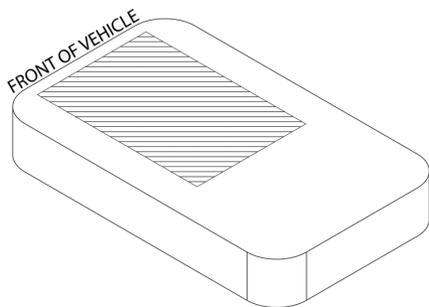

**Step 3:** Use a grease Pencil and mark cutout.


**Step 4:** Using a Razor Knife with a new blade cutout marked area.

**Step 5:** After Cutting and removing material test fit FDMC tray.

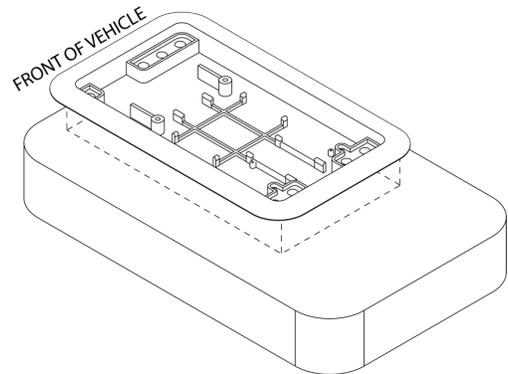


**Step 6:** Trim any material that will stop the FDMC Tray from sitting flush into armrest surface.

**Step 7a:** If there is mounting material left over, then use screws to attach the tray to the armrest using the mounting holes located in the front and the back of the tray. Then proceed to step 8.

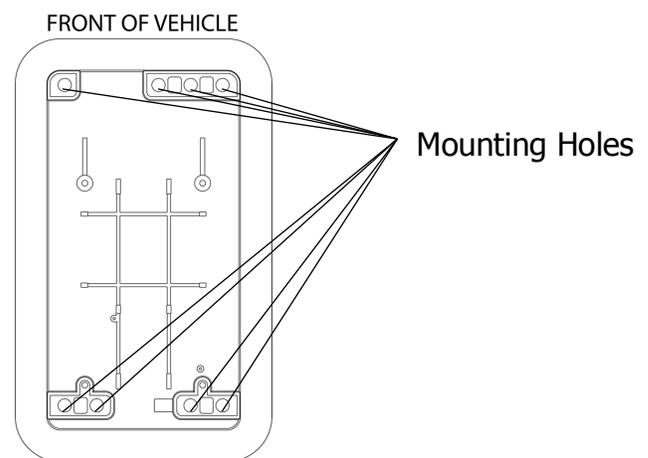


\*If there is no left-over material, use the supplied mounting bracket in step 7b.

**Step 7b:** Bend tabs appropriately to grab onto material inside armrest order to secure the FDMC tray to the armrest.

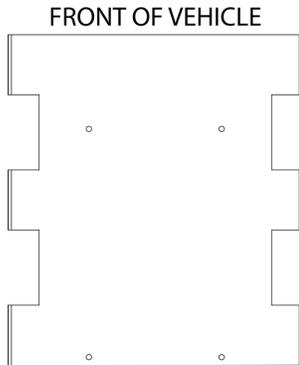


**Step 8:** Place the substrate on the top of the FDMC tray with the LED Hole facing the front of the vehicle. Push the LED into the hole 1/4 past the substrate. Attach to FDMC tray using the following screw options:

If metal plate **IS NOT USED:** use small silver screws to attach substrate:

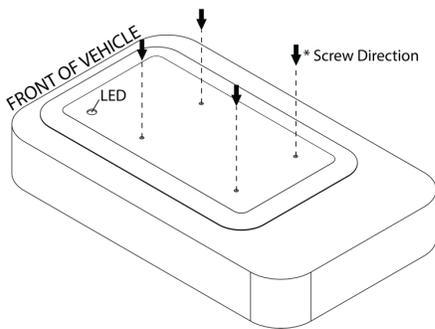


If metal plate **IS USED:** use 1" long black screws to attach substrate, and mount the metal bracket:

## INSTALLATION INSTRUCTIONS

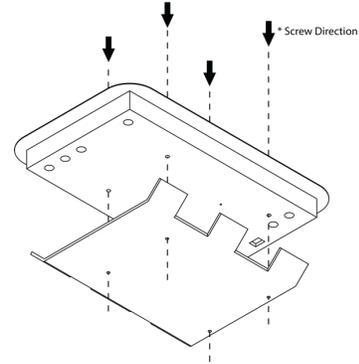

**Step 8:** Secure the mat to the mounted substrate by using the supplied double side mounting pads. Expose one side of the adhesive, and apply to the substrate. Do not block holes for alignment of the rubber mat. Remove the film on the tape and attach the mat. Push the LED through the hole of the mat. Adjust so it is flush to the mat.

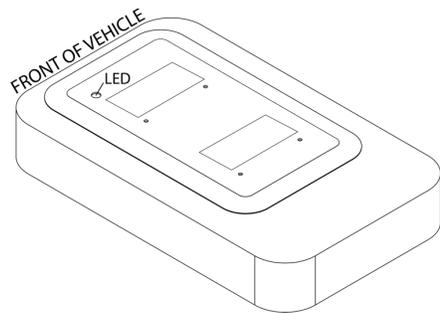

**Step 9:** Route supplied power harness to accessory 12 Volt source. Connect Red Wire to 12 Volt accessory, then connect Black Wire to ground.

**Step 10:** Test wireless charging capabilities. The LED will glow blue when the accessory is turned on. The LED will change to green when charging. Then finish installation.