

**2018 Honda Accord Qi Wireless Charging Kit
(Kit # FDMC-1250)**

Please read thoroughly before starting installation and check that kit contents are complete.

Items Included in the Kit:

Qi Wireless Charging Module
Power Point T-Harness
2 adhesive pads
These Instructions with Template
Removable Consumer Product Label

Tools & Supplies Needed:

Plastic Trim Removal Tool
Phillips Screwdriver
Center Punch/Scribe Tool
Power Drill
1/4" Drill Bit
Wire Ties
Side Cutters
90° Sander

***Note this product is designed to work with Qi compatible devices. Please confirm that your device is Qi compatible before installation. Visit www.brandmotion.com for phone compatibility guide.**

Safety Precautions:

- Work in well ventilated area that is clear of obstructions.
- Secure vehicle with tire chucks in both front and rear of tires.
- Turn vehicle accessories OFF and ensure ignition key is in OFF position.
- Wear safety goggles and snug fitting clothes.
- Use tools only for their intended purpose and which are in good repair.
- Only perform this task if confidence, skill, and physical ability permit.

**NOTE: We strive to provide accurate and up-to-date installation instructions.
For additional assistance please call Brandmotion Technical Assistance at (734) 619-1250 then dial 2.**

IMPORTANT: Do not place smart keys within 15cm of charging mat. Vehicle may not detect key to start vehicle. Do not place metal objects in tray while charging.

INSTALLATION INSTRUCTIONS

Step 1: Using a plastic trim removal tool remove panel around PTS button.



Step 2: Using a plastic trim removal tool remove trim from around top of the glove box.



Step 3: Using a plastic trim removal tool remove both sides of center console.



Step 4: Starting at a rear corner using a trim removal tool remove the center panel around shifter.



Step 5: Using a screwdriver remove screws around center dash bucket.



Step 6: After removing center dash bucket locate the bottom and use supplied template and mark 12 grid squares for removal in picture below.



INSTALLATION INSTRUCTIONS


Step 7: After locating 12 Grid squares remove highlighted area from step 6




Step 8: Make sure plastic is sanded flat for proper Freedom Charge mounting.




Step 9: With supplied template mark and drill hole for FC Power/Charge light.

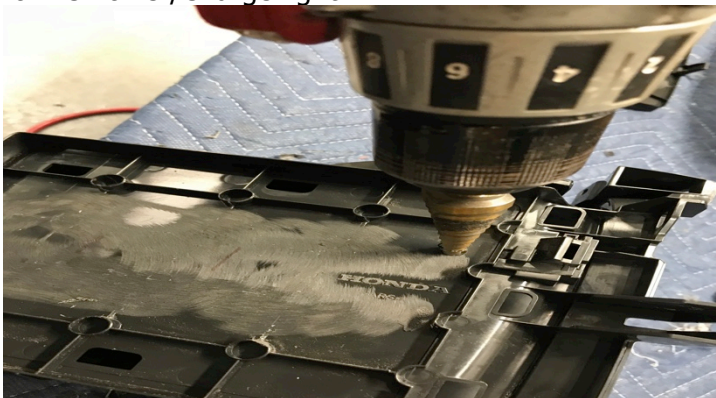

Step 10: Using the supplied double-sided tape on a clean and prepped surface mount the coil to the bucket using the Power/Charge light as a reference

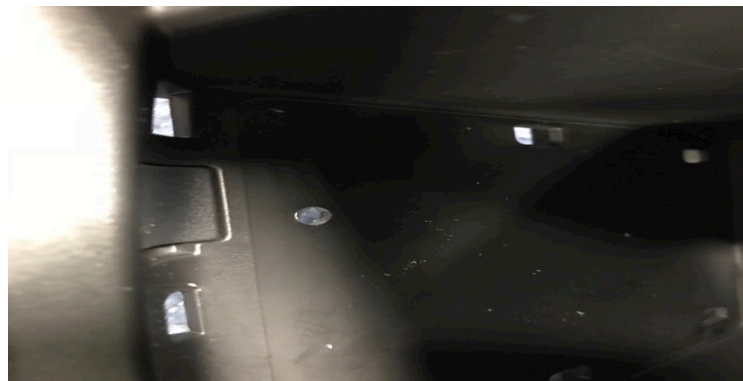

Step 11: : Using the supplied Power Point T-Harness route to 12v power outlet located in lower center console. Connect the T-Harness to the Freedom Charge Coil.

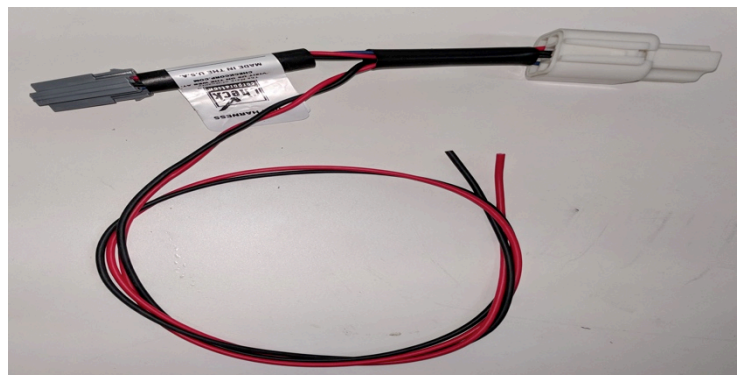

INSTALLATION INSTRUCTIONS

Step 12: Reassemble vehicle. Follow your disassembly steps in reverse order, taking care not to bind the harness wiring when reinstalling trim.



Step 13: Test system. LED light will illuminate blue once accessories are on. Once Qi equipped device is placed on Freedom Charge LED will illuminate green and charging begins. *Please note on some devices syncing may take up to 15 seconds. Coil locations vary on various devices; move device on mat until LED illuminates green



