

**2018 Honda Civic Qi Wireless Charging Kit  
(Kit # FDMC-1251)**

**Please read thoroughly before starting installation and check that kit contents are complete.**

**Items Included in the Kit:**

Qi Wireless Charging Module  
Powerpoint T-Harness  
2 adhesive pads  
These Instructions with Template  
Removable Consumer Product Label

**Tools & Supplies Needed:**

Plastic Trim Removal Tool  
Phillips Screwdriver  
Center Punch/Scribe Tool  
Power Drill  
1/4" Drill Bit  
Wire Ties  
Side Cutters  
90° Sander

**\*Note this product is designed to work with Qi compatible devices. Please confirm that your device is Qi compatible before installation. Visit [www.brandmotion.com](http://www.brandmotion.com) for phone compatibility guide.**

**Safety Precautions:**

- Work in well ventilated area that is clear of obstructions.
- Secure vehicle with tire chucks in both front and rear of tires.
- Turn vehicle accessories OFF and ensure ignition key is in OFF position.
- Wear safety goggles and snug fitting clothes.
- Use tools only for their intended purpose and which are in good repair.
- Only perform this task if confidence, skill, and physical ability permit.

**NOTE: We strive to provide accurate and up-to-date installation instructions.  
For additional assistance please call Brandmotion Technical Assistance at (734) 619-1250 then dial 2.**

## INSTALLATION INSTRUCTIONS

**Step 1:** Using a plastic trim removal tool remove side panels around center console. Start at rear corner and work your way forward.



**Step 2:** Remove the two #2 Phillip screws one from each side of shifter.



**Step 3:** Using a plastic trim tool remove trim panel around shifter.



**Step 4:** Using a plastic trim tool remove center plastic cover in front of shifter.



## INSTALLATION INSTRUCTIONS

**Step 5:** On the back side of center plastic cover remove the 12 grid squares shown in the picture below. \* Make sure plastic is fully removed like below



**Step 6:** Using supplied template and double-sided tape align and mount Freedom charge coil to cover.




**Step 7:** Using FC coil as a guide drill a ¼ hole for the Power/Charge light



## INSTALLATION INSTRUCTIONS

**Step 8:** Using the supplied power T-Harness route to 12v power outlet located in lower center console. Connect the T-Harness to the Freedom Charge coil.

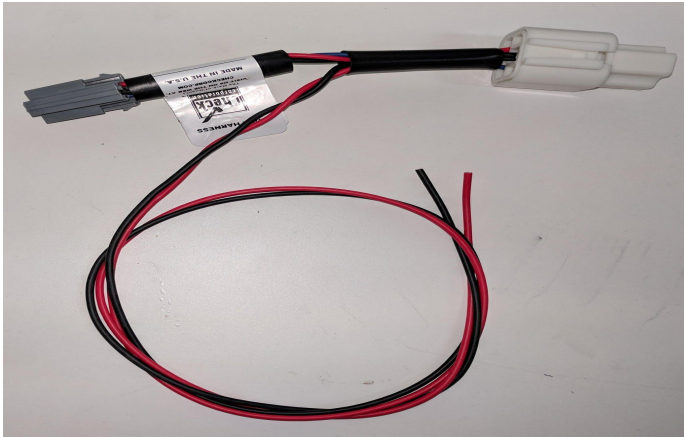

**Step 9:** Test system. LED light will illuminate blue once accessories are on.(LED will be in a different location then in picture.) Once Qi equipped device is placed on Freedom Charge LED will illuminate green and charging begins. \*Please note on some devices syncing may take up to 15 seconds. Coil locations vary on various devices; move device on mat until LED illuminates green



**Step 10:** Reassemble vehicle. Follow your disassembly steps in reverse order, taking care not to bind the harness wiring when reinstalling



