

**Multi Mount Universal CMOS Camera with Optional Grid Lines
(Kit # FLTW-7602)**

Please read thoroughly before starting installation and check that kit contents are complete.

Items Included in the Kit:

- Camera
- Hole Saw for camera mount
- Chassis Harness
- Power Harness
- These Instructions with Template

Tools & Supplies Needed:

- 1/4" Drill Bit (If Needed)
- Center Punch
- Power Drill
- Wire Ties
- Electrical Tape or Heat Shrink Tubing
- Plastic Trim Removal Tool
- Soldering Iron & Solder (Recommended)
- Small grommet or Silicone (If needed)
- Vehicle service manual (If needed)

Safety Precautions:

- Work in well ventilated area that is clear of obstructions.
- Secure vehicle with tire chucks in both front and rear of tires.
- Turn vehicle accessories OFF and ensure ignition key is in OFF position.
- Wear safety goggles and snug fitting clothes.
- Use tools only for their intended purpose and which are in good repair.
- Only perform this task if confidence, skill, and physical ability permit.

NOTE: We strive to provide accurate and up-to-date installation instructions.

Step 1: Determine Camera location. Place template in desired position to confirm fitment. (IMPORTANT: Some states prohibit items blocking the license plate; check local authorities to confirm legal status for your application).


Step 2: Mark Camera location with supplied template, Center Punch the mark, and use supplied 19mm Hole Saw to drill Camera mounting hole. NOTE: If your vehicle has a liftgate panel/ trunk trim cover, it must be removed.



Step 3: (If necessary) Use a 1/4" Drill Bit to make a pass through hole in any obstructing panel for the Camera Harness connector.

Step 4: Insert connector end of the Camera Harness through the hole(s) you drilled.


RECOMMENDED: Protect Camera Harness from any sharp metal edges by applying a small amount of silicone caulk or a rubber grommet (shown below) to any area that may come into contact with metal.

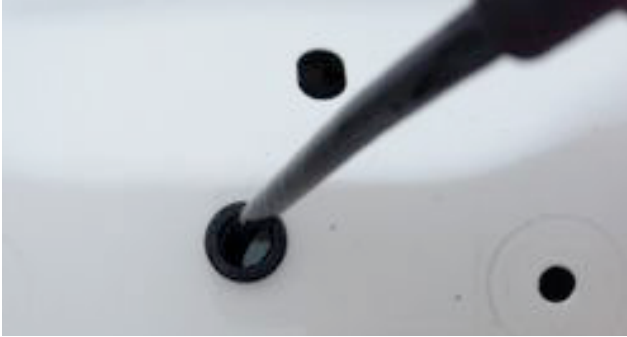

Step 5: Route Camera and/ or Chassis Harness along existing wiring and secure using Wire Ties or Electrical Tape.

IMPORTANT: Ensure harnesses move freely with the trunk or liftgate.


Step 6: Connect Camera Harness to supplied Chassis Harness. The optimal location for this junction may occur at the top of the liftgate or inner trunk edge.

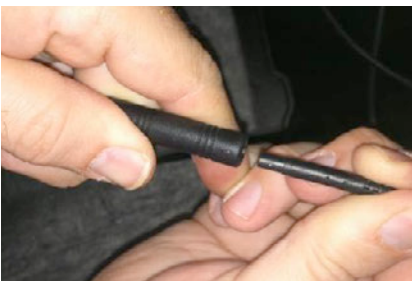

Step 7: Route Chassis Harness forward. It may be necessary to remove sill plates, pillar covers, side panels, etc. Use a Plastic Trim Removal Tool to avoid damage to trim pieces.

Step 8: Connect Power Harness male RCA connector to RCA located on your Display.

INSTALLATION INSTRUCTIONS

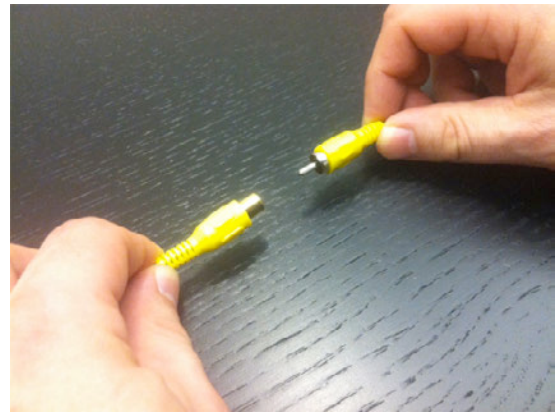

Step 9: Using a vehicle specific service guide/wiring diagram and a multi-meter verify 12v Ignition or Reverse power source. Red wire of power harness connects to 12v+ Ignition or Reverse power and Black wire of power harness to Black chassis ground nut or wire. RECOMMENDED: Solder wires and cover with Heat Shrink Tubing.

Step 10: Connect Chassis Harness to supplied Power Harness RCA and power plugs.



Step 11: Use Wire Ties or Electrical Tape to secure Chassis Harness and Jumper Harness RCA and power connections.

Step 12: Coil any excess Chassis Harness and secure it to existing vehicle wiring with Wire Ties or Electrical Tape.

Step 13: Test system. Close trunk or liftgate and clear all removed items from around the vehicle before starting the vehicle. Next, shift into Reverse and check radio display for the camera image.

Step 14: (If necessary) Adjust camera aim.
Reposition camera to the desired viewing angle.

Step 15: Reassemble vehicle. Follow your disassembly steps in reverse order, taking care not to bind the harness wiring when reinstalling trim.



Horizontal Mounting



Vertical Mounting


INSTALLATION INSTRUCTIONS

CAMERA OPTIONS

The camera offers grid lines or non-grid lines and flip image or non-flip image options. Flip images option allows the camera to be mounted on a vertical or horizontal surface

Grid line options: Default setting is set to display no grid lines. To display the grid lines , cut the loop of the green wire and separate near the end of the Camera Harness.

Flip images options: Default setting is Horizontal Mounting installation. To change to flipped image display for Vertical Mounting cut the loop of the white wire and separate near the end of the Camera Harness.

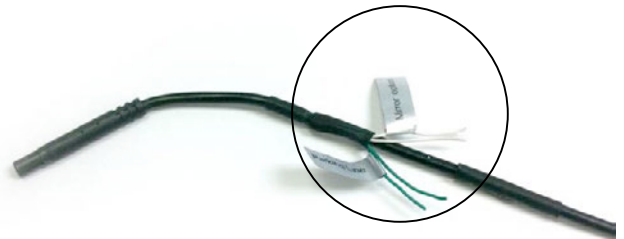

Green and White wires on the Camera Harness.