# INSTALLATION INSTRUCTIONS

# Ford F-Series 8-inch MyTouch Cargo Camera Plug and Play harness 2013-Current (Kit # FLTW-7624)


Please read thoroughly before starting installation and check that kit contents are complete.

### **Items Included in the Kit:**

Factory T-harness
These instructions

## **Tools & Supplies Needed:**

Zip ties Electrical tape Heat shrink 7mm socket Plastic panel removal tools

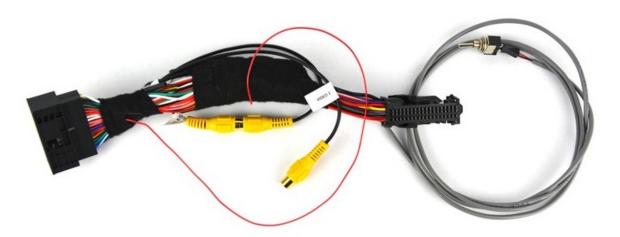

# **Safety Precautions:**

- Work in well ventilated area that is clear of obstructions.
- Secure vehicle with tire chucks in both front and rear of tires.
- Turn vehicle accessories OFF and ensure ignition key is in OFF position.
- Wear safety goggles and snug fitting clothes.
- Use tools only for their intended purpose and which are in good repair.
- Only perform this task if confidence, skill, and physical ability permit.

NOTE: We strive to provide accurate and up-to-date installation instructions. For the latest full color instructions, as well as an installation video, please visit <a href="www.brandmotion.com">www.brandmotion.com</a>

# **INSTALLATION INSTRUCTIONS**

### **INSTALLING:**

- 1. Remove trim around screen/display.
- 2. Remove the four 7mm bolts that hold display screen to dash.



- 3. Remove the large plug to the left of the display by lifting the handle like plug.
- 4. Plug the factory harness that was just unplugged from the display into the female end of the FLTW-7624.
- 5. Plug the other end of the FLTW-7624 into the factory display. Lock the plug in by pushing down on the "handle".
- 6. Connect the RED wire from the FLTW-7624 to a 12V accessory source.
- 7. Connect your cargo camera (not supplied) RCA to the VIDEO 2 RCA.
- 8. If you have an existing OEM backup camera, leave the VIDEO 1 RCA taped to the OEM CAMERA RCA. If you are adding an aftermarket camera, untape and connect the aftermarket camera to the VIDEO 1 RCA.
- 9. Mount the toggle switch in an accessible position. Position 1 enables VIDEO 1 display when in reverse; position 2 enables VIDEO 2 display in reverse.
- \*\*\*NOTE: FOR THIS HARNESS TO WORK CORRECTLY, THE VEHICLE <u>MUST</u> HAVE AN EXISTING BACKUP CAMERA. OTHERWISE, IT WILL HAVE TO BE TAKEN TO A DEALER AND UPDATED OR THE 9002-2781 BACKUP CAMERA INTERFACE MUST BE ADDED AND INSTALLED (sold separately). \*\*\*